



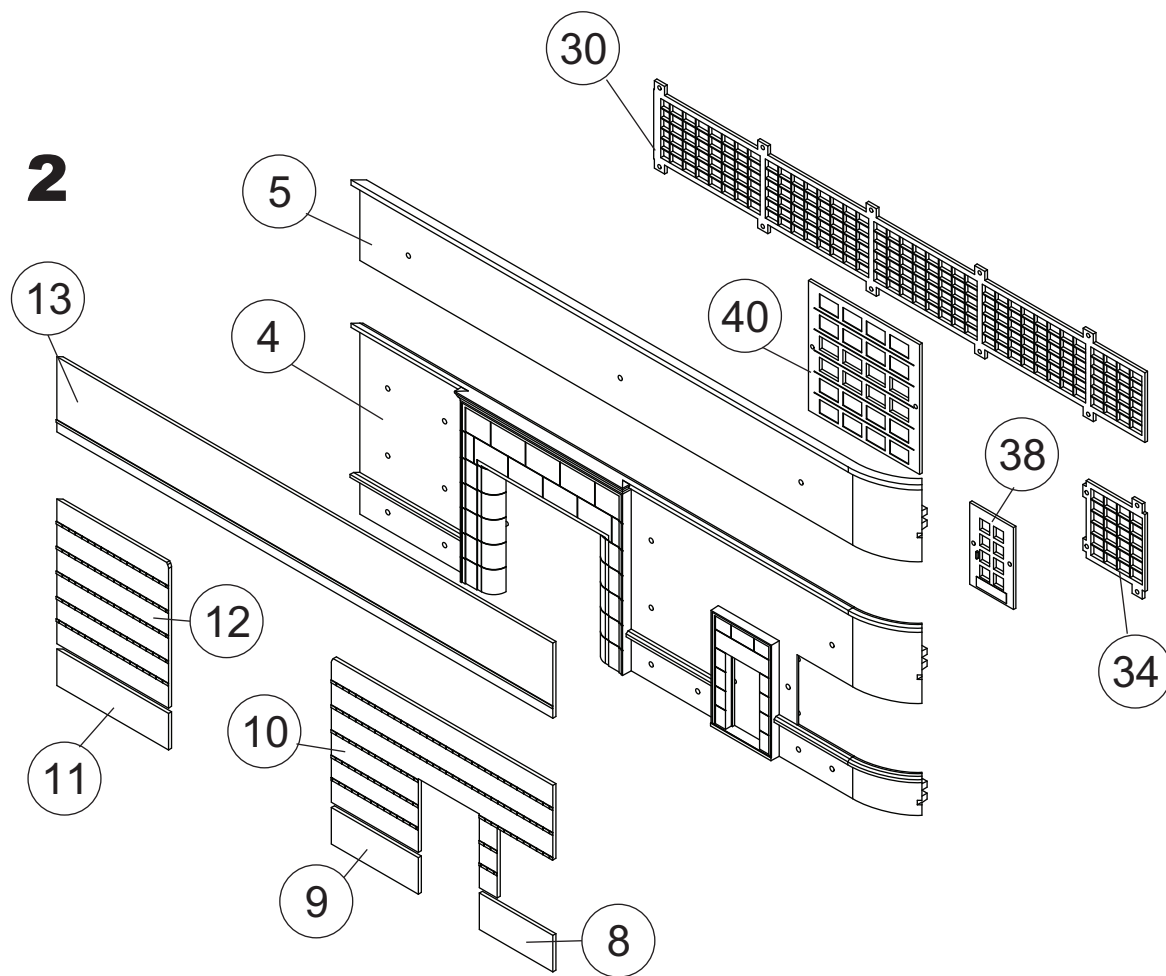


2) Glue brick panels (8, 9, 10, 11 & 12) to wall (4). Make sure the narrow edges of the crossbars (muntins) on all windows face outside and glue window (34) to wall as shown; glue long window band (30) to the top inside edge of part 4 and the bottom inside edge of the upper wall (5). Glue personnel door (38) to inside of wall (4); overhead door (40) can be left off, modified as in step 1 or glued in place as desired. Glue brick panel (13) to the outer face of part 5.

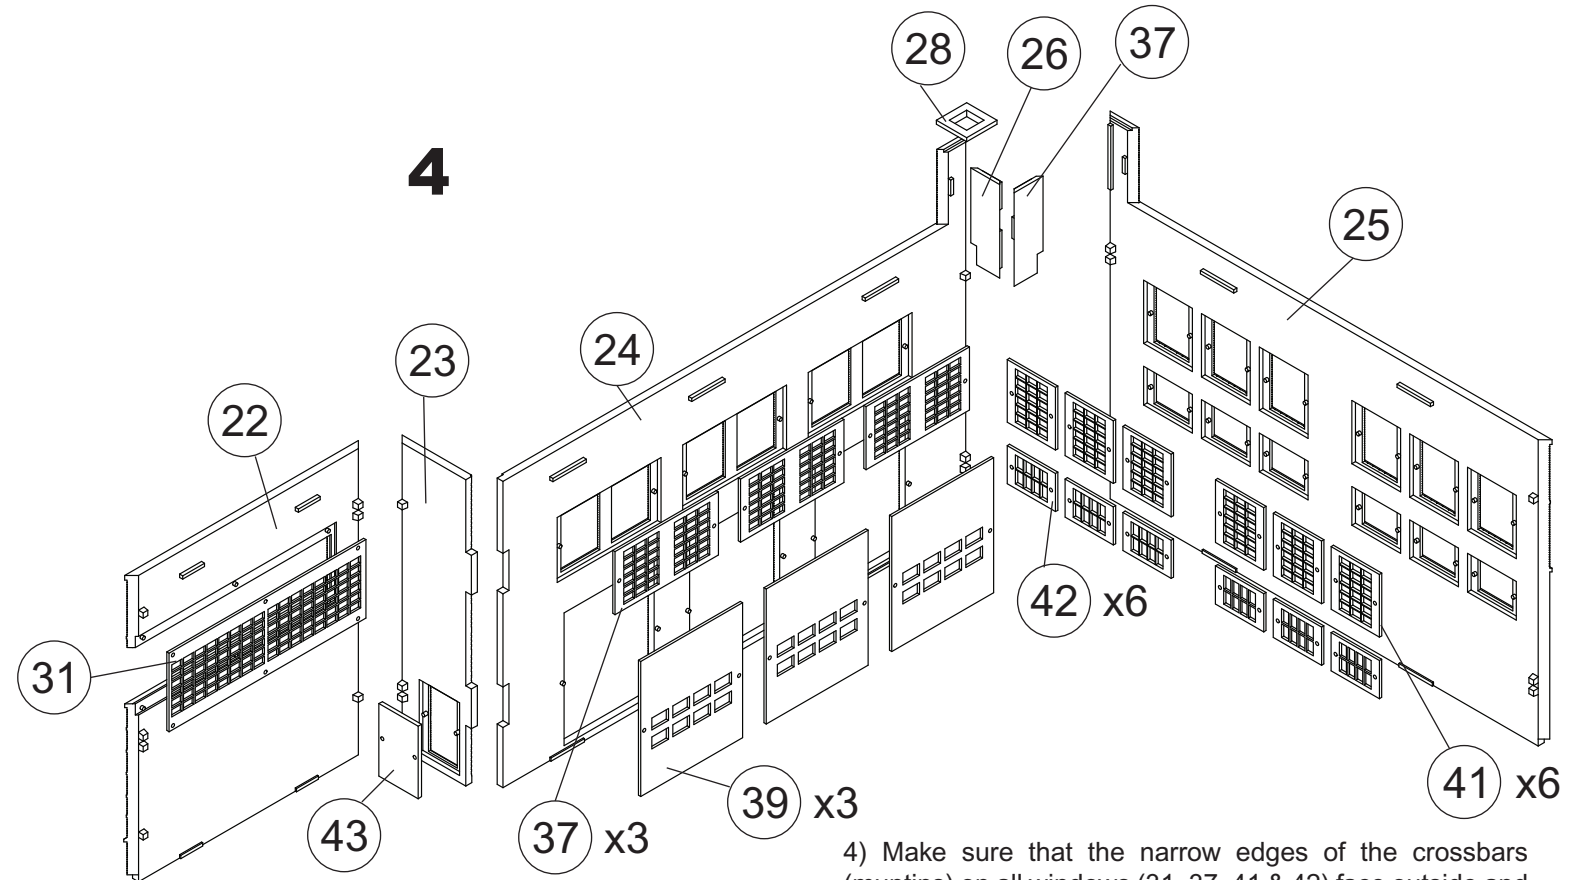

4) Make sure that the narrow edges of the crossbars (muntins) on all windows (31, 37, 41 & 42) face outside and glue to the inside edge of the walls where shown. Before assembling the walls, test fit the 45-degree angled edges and adjust if needed for a tight fit. Using the floor (29) to keep the assembly square, glue walls (22, 23, 24 & 25) to the floor and together at the inside corners. Glue chimney parts (26, 27) to walls (24, 25) as shown, and glue chimney cap (28) in place.


Cut glazing from the clear sheet slightly larger than all windows and doors, and attach to the rear surface of each with white glue.

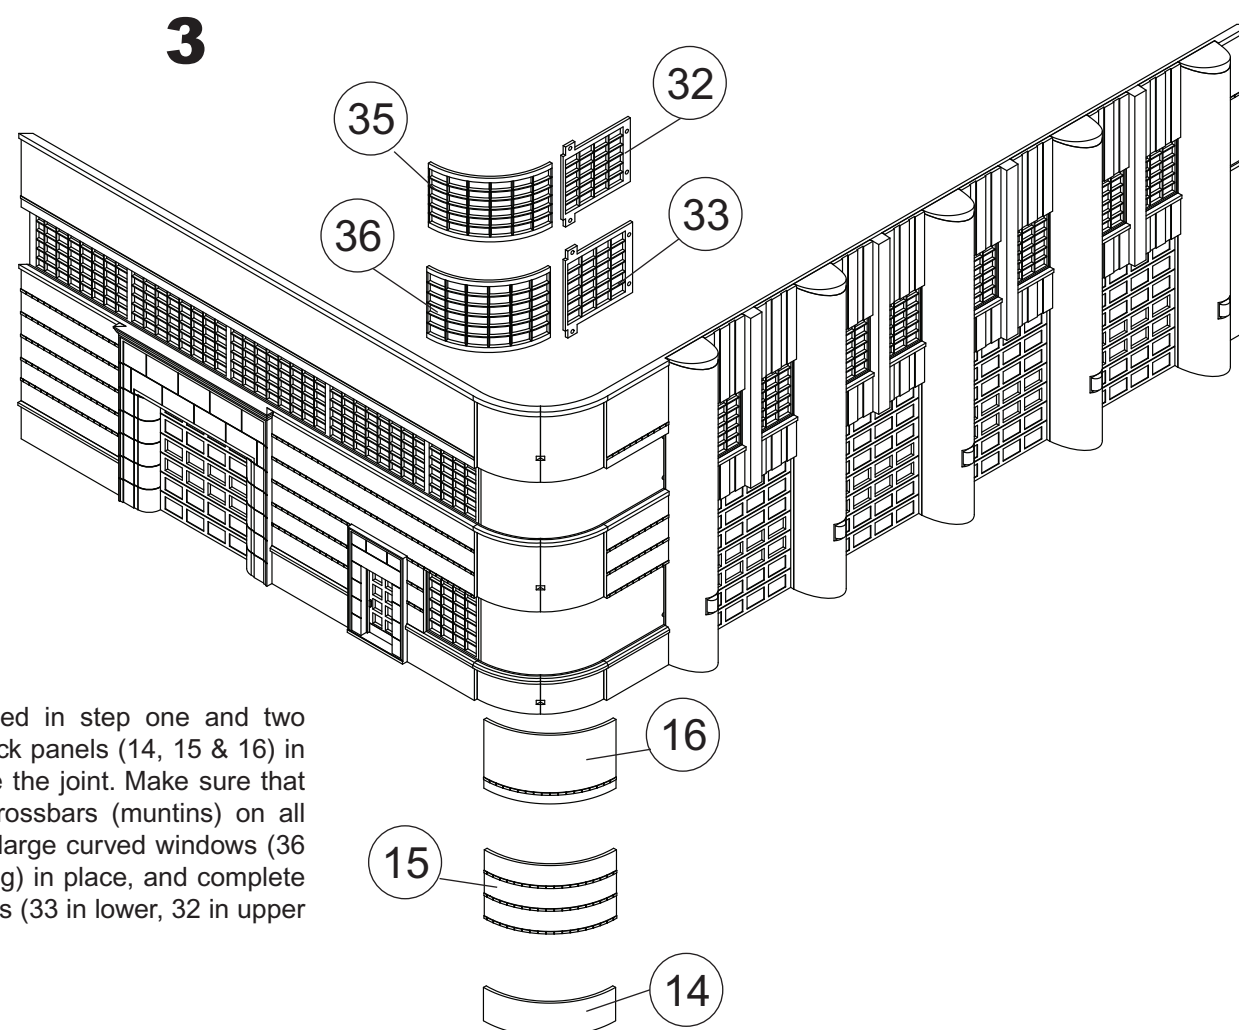

3) Glue the walls assembled in step one and two together as shown. Glue brick panels (14, 15 & 16) in place to cover and reinforce the joint. Make sure that the narrow edges of the crossbars (muntins) on all windows face outside; glue large curved windows (36 in lower, 35 in upper opening) in place, and complete assembly with small windows (33 in lower, 32 in upper opening) as shown.

5) Glue the short sidewalk/ramp (46) and the long sidewalk/ramp (29) to the floor (29).

6) The roof may be glued in place if desired, or set in place so it can be removed to add interior details (sold separately). Glue vent bases (44) in openings, then glue vent tops (45) to bases. When dry, the vents may carefully be used as handles to assist in fitting the roof in position. Insert the roof into the opening, working it under the chimney and into position on the locating ridges. Make sure the fire escape platform (50) is positioned with the thinner side of the ladder opening towards the wall, and glue in place on wall (24). Glue railings (51, 52 & 53) to platform (50). Make sure the standoff pins are at the very bottom of the ladder (48) and glue in the openings in wall (24). If gluing your roof in place, glue the ladder top railing pieces (49) to the outside edges of the ladder (48): for a removable roof, do not use these parts.

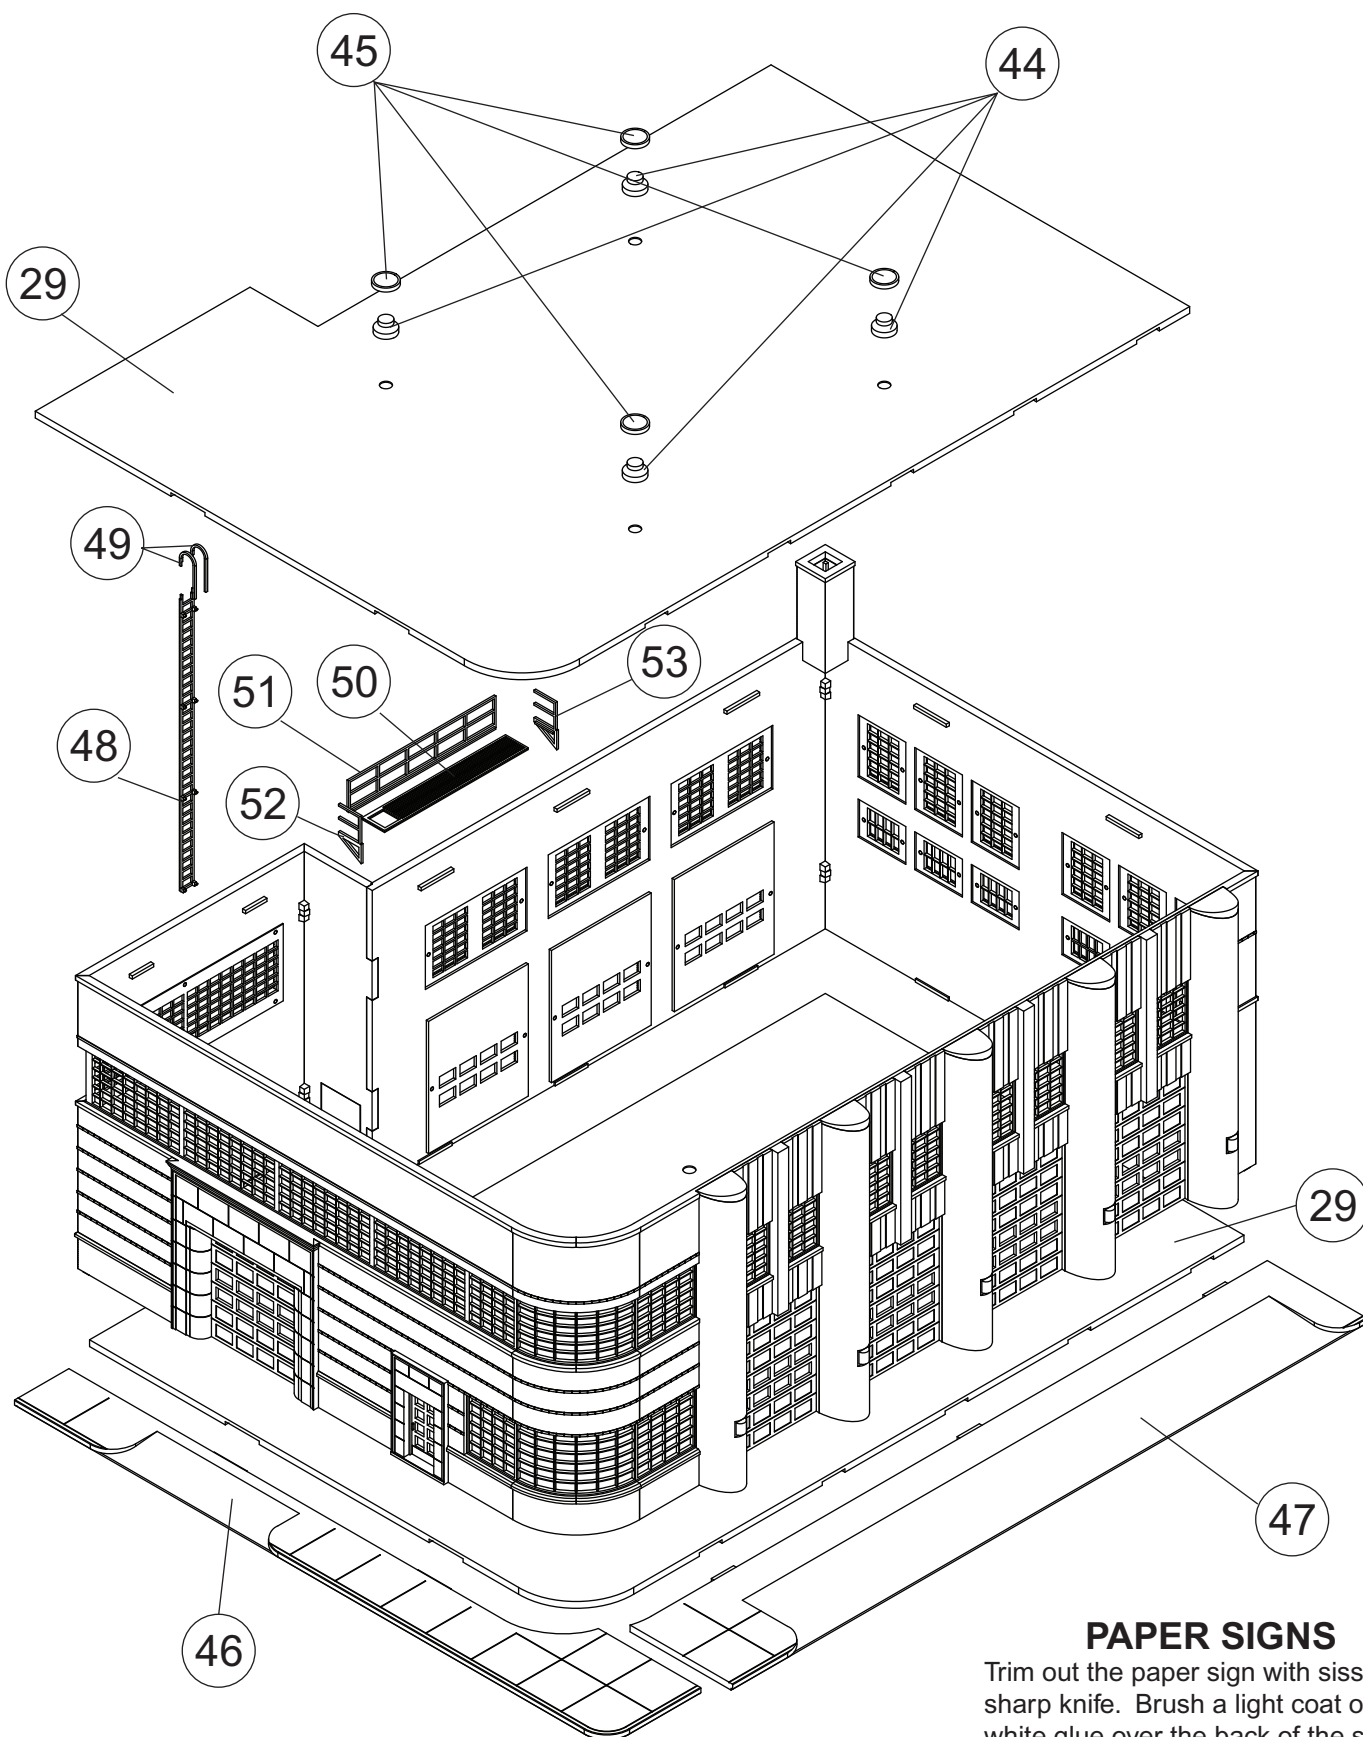

PAPER SIGNS

Trim out the paper sign with sissors or sharp knife. Brush a light coat of white glue over the back of the sign. Place into position and press permanently into place with your fingers.